



For release of crimp connections made with **crimp contacts series CD**

- ① Insert the tool **perpendicular to the front surface** of the connector body around the contact to be dislodged from the insulator body.

Do not tilt or rotate the tool in the contact cavity, as you may cause unrecoverable damage to the contact retaining spring.

- ② By a slight further vertical pressure close the contact retaining spring and recover the crimped connection by pulling it rearwards, then remove axially the tool tip from the empty contact cavity.

